


Step 1.1 Install Sidewall Z Closures on to Roof Panels with appropriate accessories.

Step 1.2 Field Notch so that the Z Clousres butt at the top of the Ridge.

Step 2.1 Install Sidewall Trim. Step 2.2 On one of the Sidewall Trims Field Notch and Bend Tab over other Sidewall Trim. (Seal with appropriate Sealant) Step 2.3 On same Sidewall Trim Field Notch Tab to run behind other Sidewall Trim. (Seal with appropriate Sealant and Pop Rivet)

Step 3.1 Install Ridge Z Clousres with appropriate accessories. **Step 3.2** Notch top legs of Ridge Z Closures back so it will run up against Sidewall Z Closures.

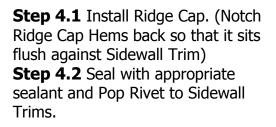

Step 5.1 Install Counterflashing. Step 5.2 Field Notch Counterflashing so that they butt at the top of the Ridge.

Step 5.3 Notch Tab in one of the Counterflashings to be able to seal and Pop Rivet both Counterflashings together.

> ATAS INTERNATIONAL, INC Allentown PA 610-395-8445 Mesa AZ 480-558-7210

		Standing Seam Ridge to Sidewall Detail			
		DWG. NO.	DR KRK	DATE 2/20/2015	
		MATERIAL	APP	DATE	
BY	APP		SH. SIZE B	SCALE X:X	