




Step 1

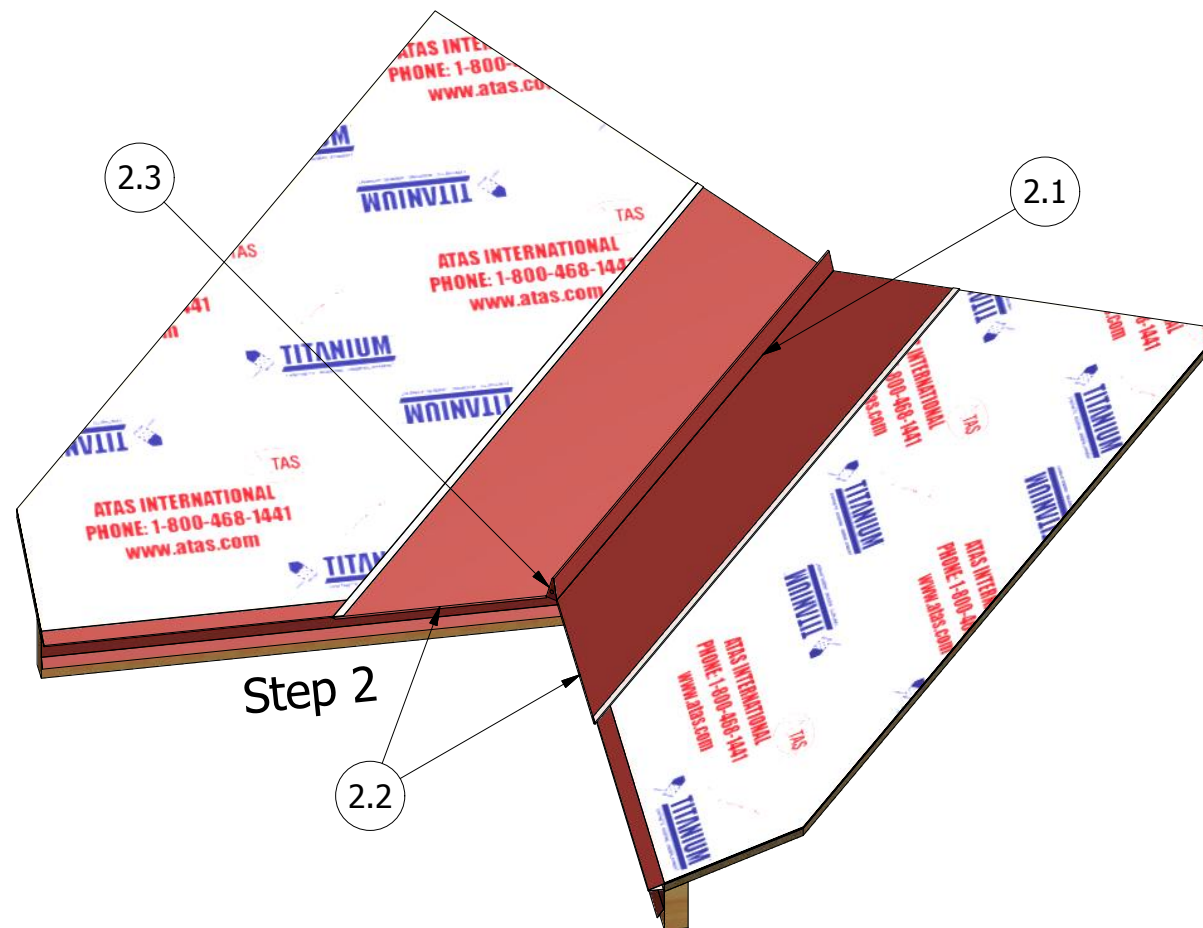

Step 2

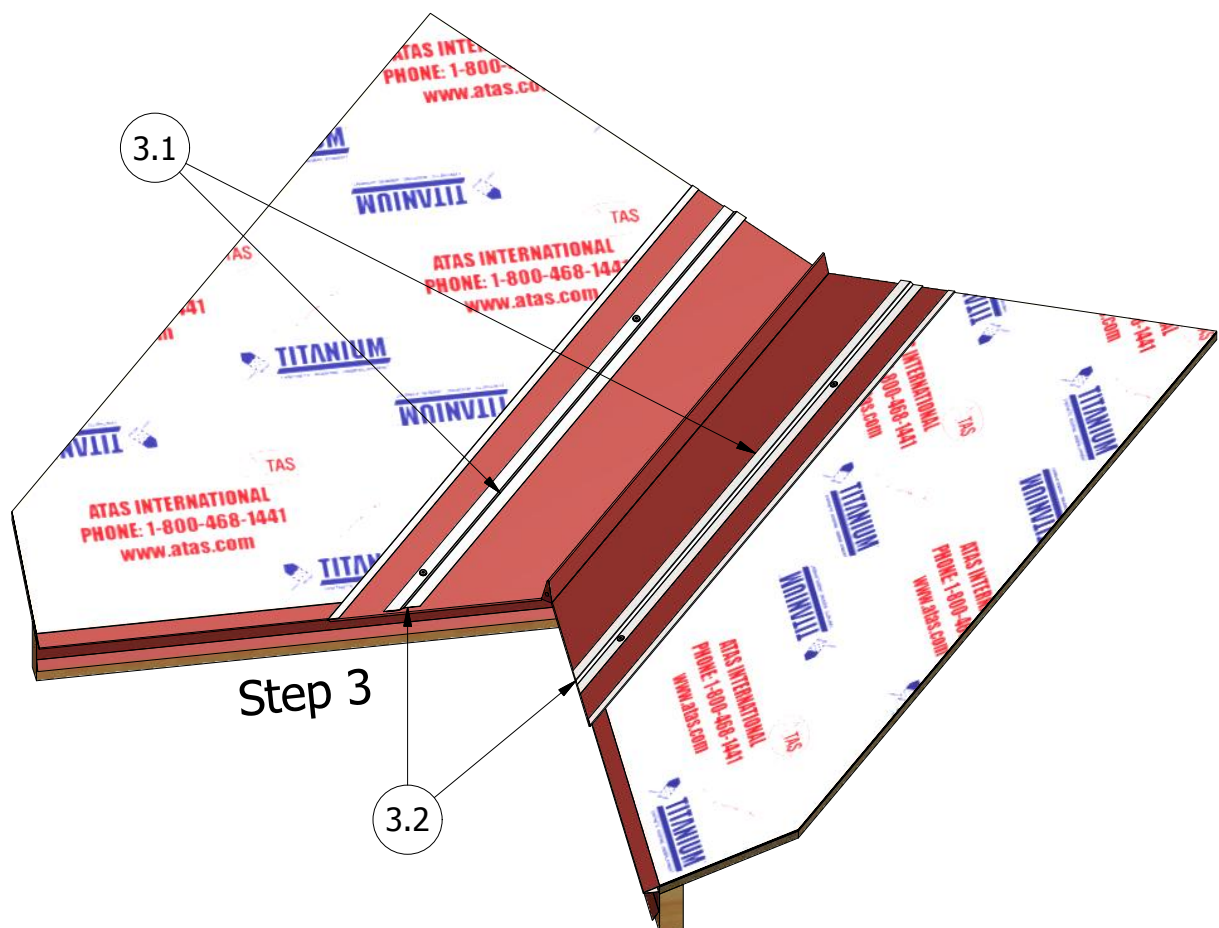

Step 3

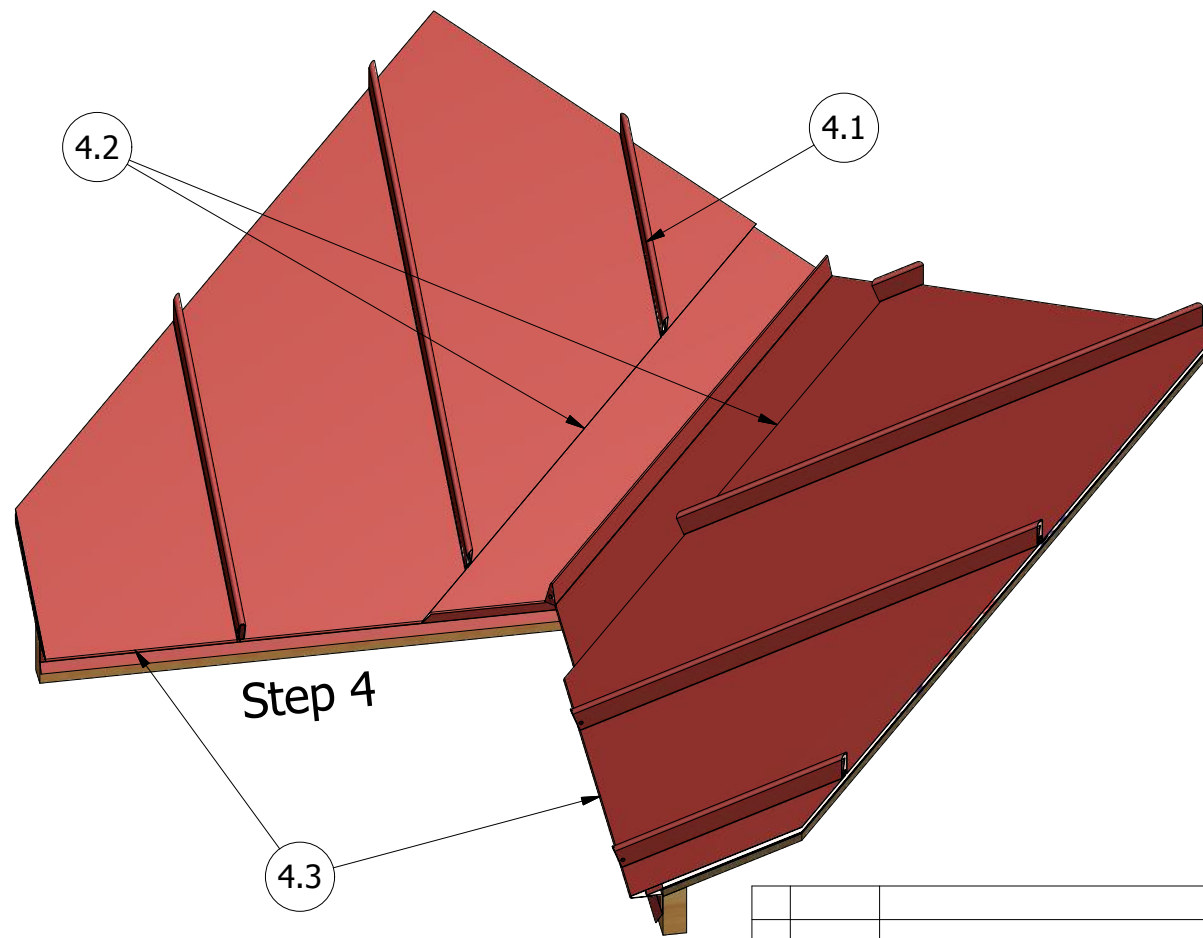

Step 4

Step 1.1 Install Eave Trim.

Step 2.1 Install Valley Pan.

Step 2.2 Field Notch and Hem Valley Pan over Eave Trim.

Step 2.3 Field Notch and Fold Valley Pan Peek Tabs at Eave and Pop Rivet.


Step 3.1 Install Joggle Cleat with appropriate accessories.

Step 3.2 Field Notch Joggle Cleat to bottom edge of Valley Pan.

Step 4.1 Install Panels on Roof.

Step 4.2 Field Notch and Hem Roof Panels over Joggle Cleat.

Step 4.3 Field Notch and Hem Roof Panels over Eave Trim.

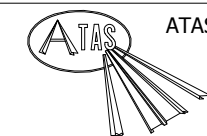

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE
Standing Seam Valley to Eave Detail

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	DWG. NO.	DR	KRK	DATE	2/18/2015
						APP		DATE	
						SH. SIZE	B	SCALE	X:X