



FIELD BEND PANEL FOR
COMPRESSION FIT IN
POCKET OF CORNER.

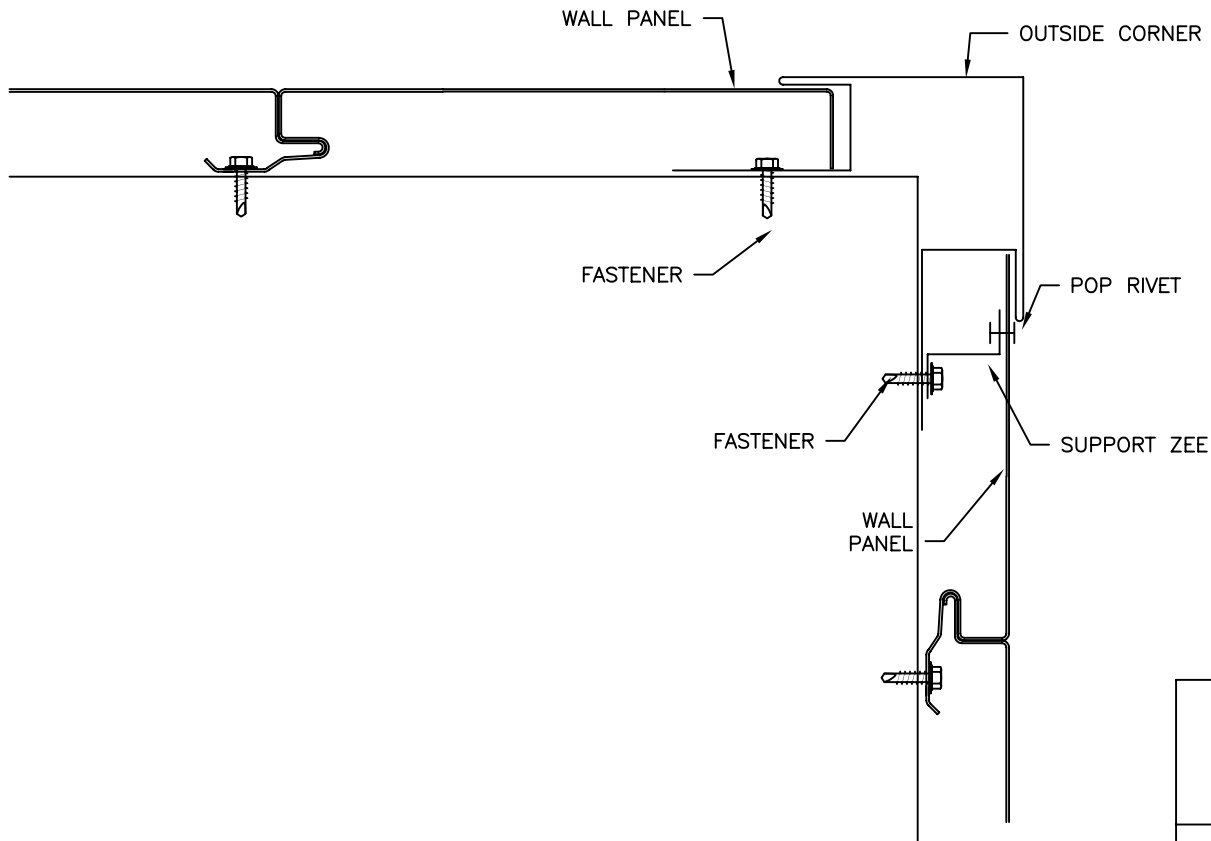

USE ZEE CHANNEL
AS REQUIRED TO COMPRESSION
FIT PANEL IN POCKET OF
CORNER FLASHING. POP
RIVET AS NECESSARY.

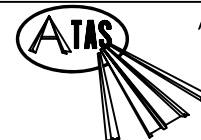

ATAS INTERNATIONAL, INC.
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE DWF Outside Corner

DWG NO. / FILE NO. DWF Outside Corner SCALE 3"=1'-0"

DRAWN BY DAS DATE 3-6-06 APPR. BY JEB DATE 5-30-06

REVISION NO. XXXX REVISION DATE MM/DD/YY APPR. BY XXXX DATE MM/DD/YY

Rev. No.	Revision Date	Drawn By	Description of Revision
0	5-30-06	DAS	DWF Outside Corner