




Step 1

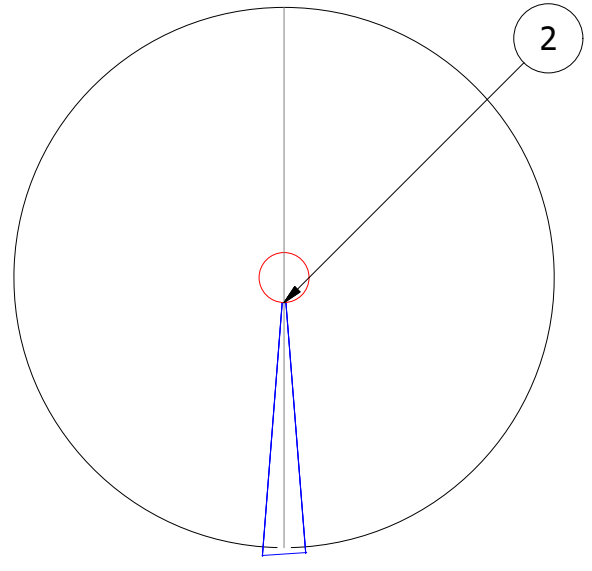


Step 2

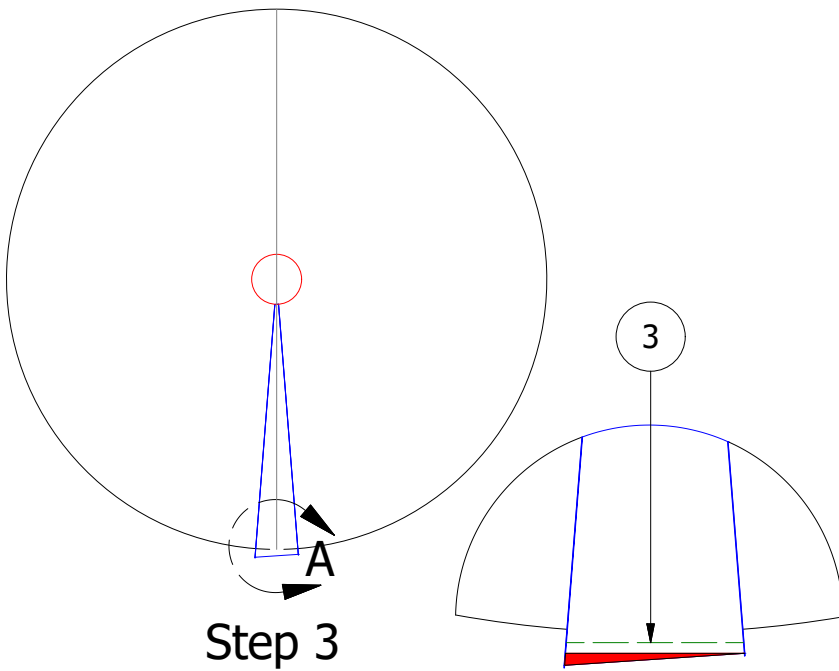

Step 3

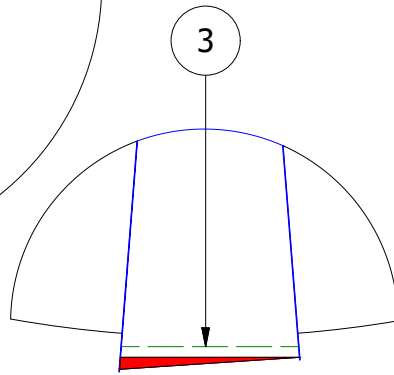

DETAIL A

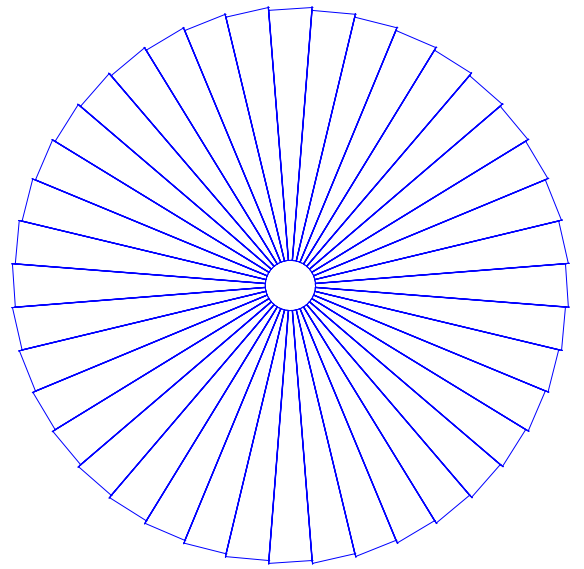

Step 4


**Step 1a:** Mark a straight line up the Turret where first Panel is going to be installed.

**Step 1b:** Mark out Top Circumference supplied by ATAS.

**Step 2:** Position the top of the Tapered Panel as shown and at the Top Circumference Line.

**Step 3:** Field Trim bottom of Tapered Panel as shown. Fold Eave Hem if applicable.

**Step 4:** Install remaining Panels and use fill in Panels when necessary.

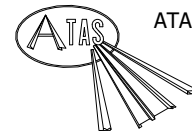

ATAS INTERNATIONAL, INC  
 Allentown PA  
 610-395-8445  
 Mesa AZ  
 480-558-7210

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

TITLE Tapered Panel Installation Guide			
DWG. NO.	DR KRK	DATE	6/2/2021
MATERIAL	APP	DATE	
SH. SIZE	A	SCALE	X:X