

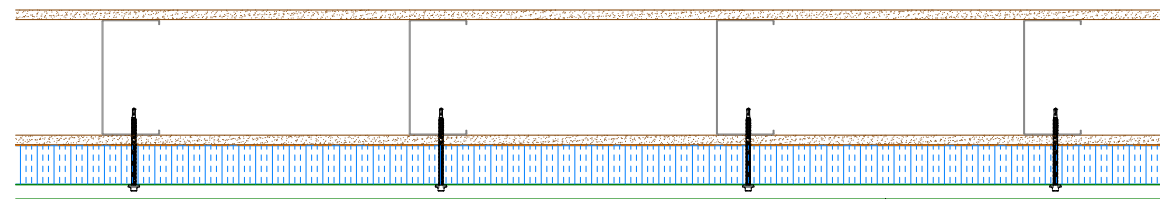
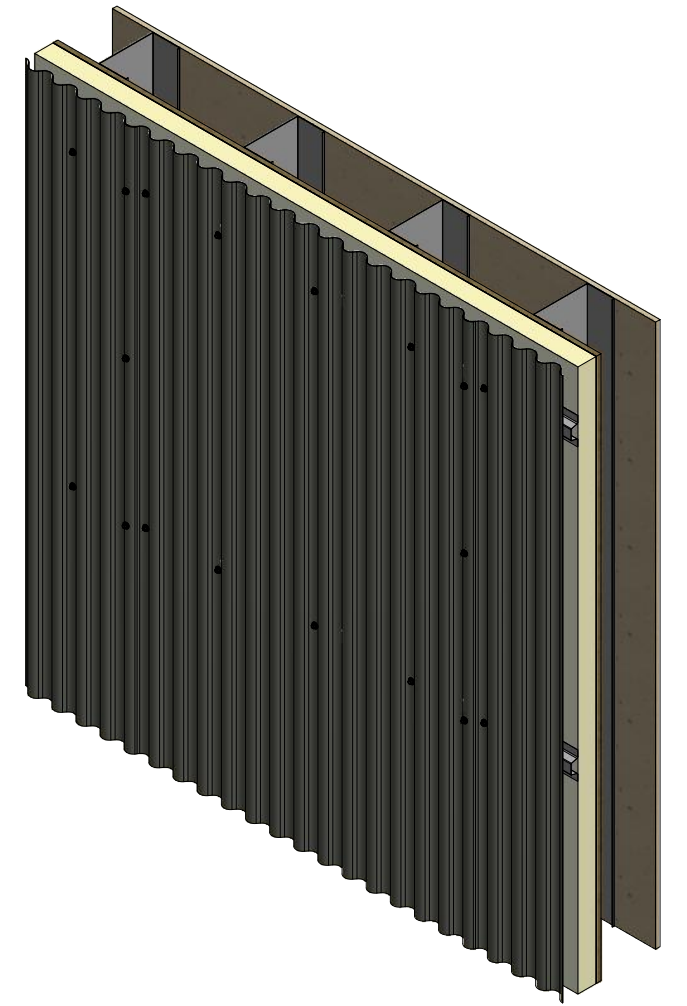



Vertical Panel

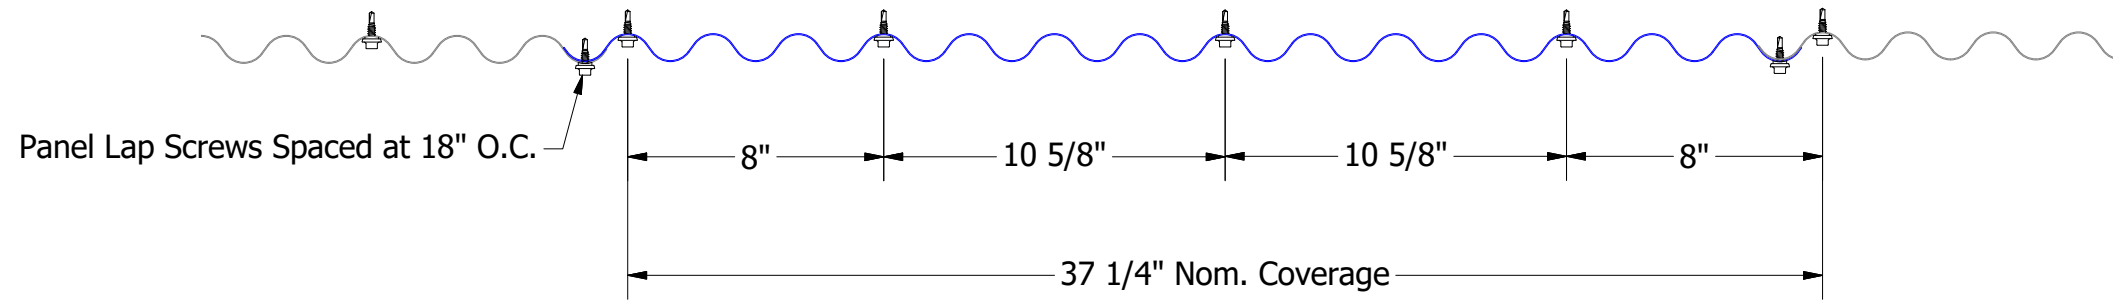

Attach Subgirts into Metal Wall Studs using Appropriate Fasteners at 36" O.C. Max.

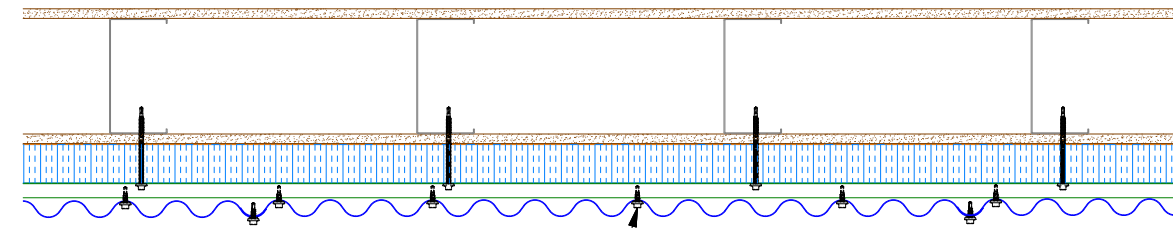

Attach Panel System to Subgirts using #14 x 7/8" HWH Screws.

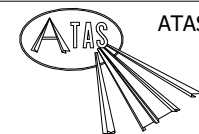

ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

TITLE **Corrugated Panel Fastening Detail**

				DWG. NO.	DR	DATE
01	11/11/2021	Updated Subgirt Fastener Spacing	KRK		KRK	8/15/2014
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	MATERIAL	APP	DATE
				SH. SIZE	B	SCALE X:X