







Vertical Panel

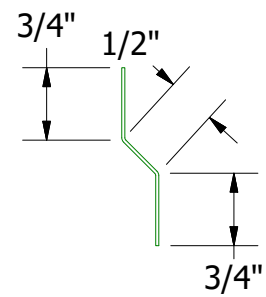

DWA975/DSA975 - Joggle Cleat

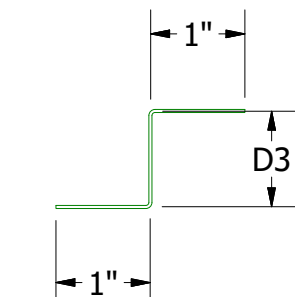

Support Z
DWA681: D3=1"
DSA681: D3=1 5/8"

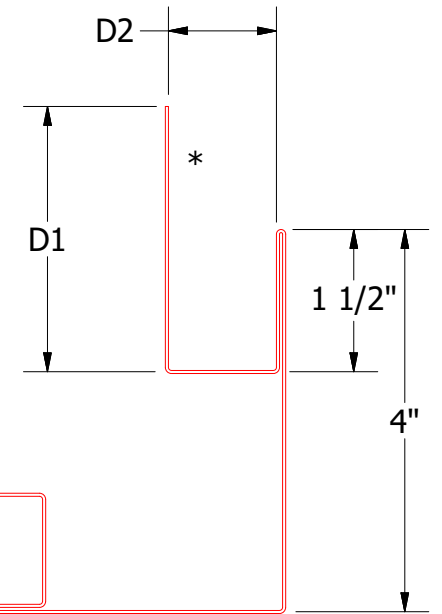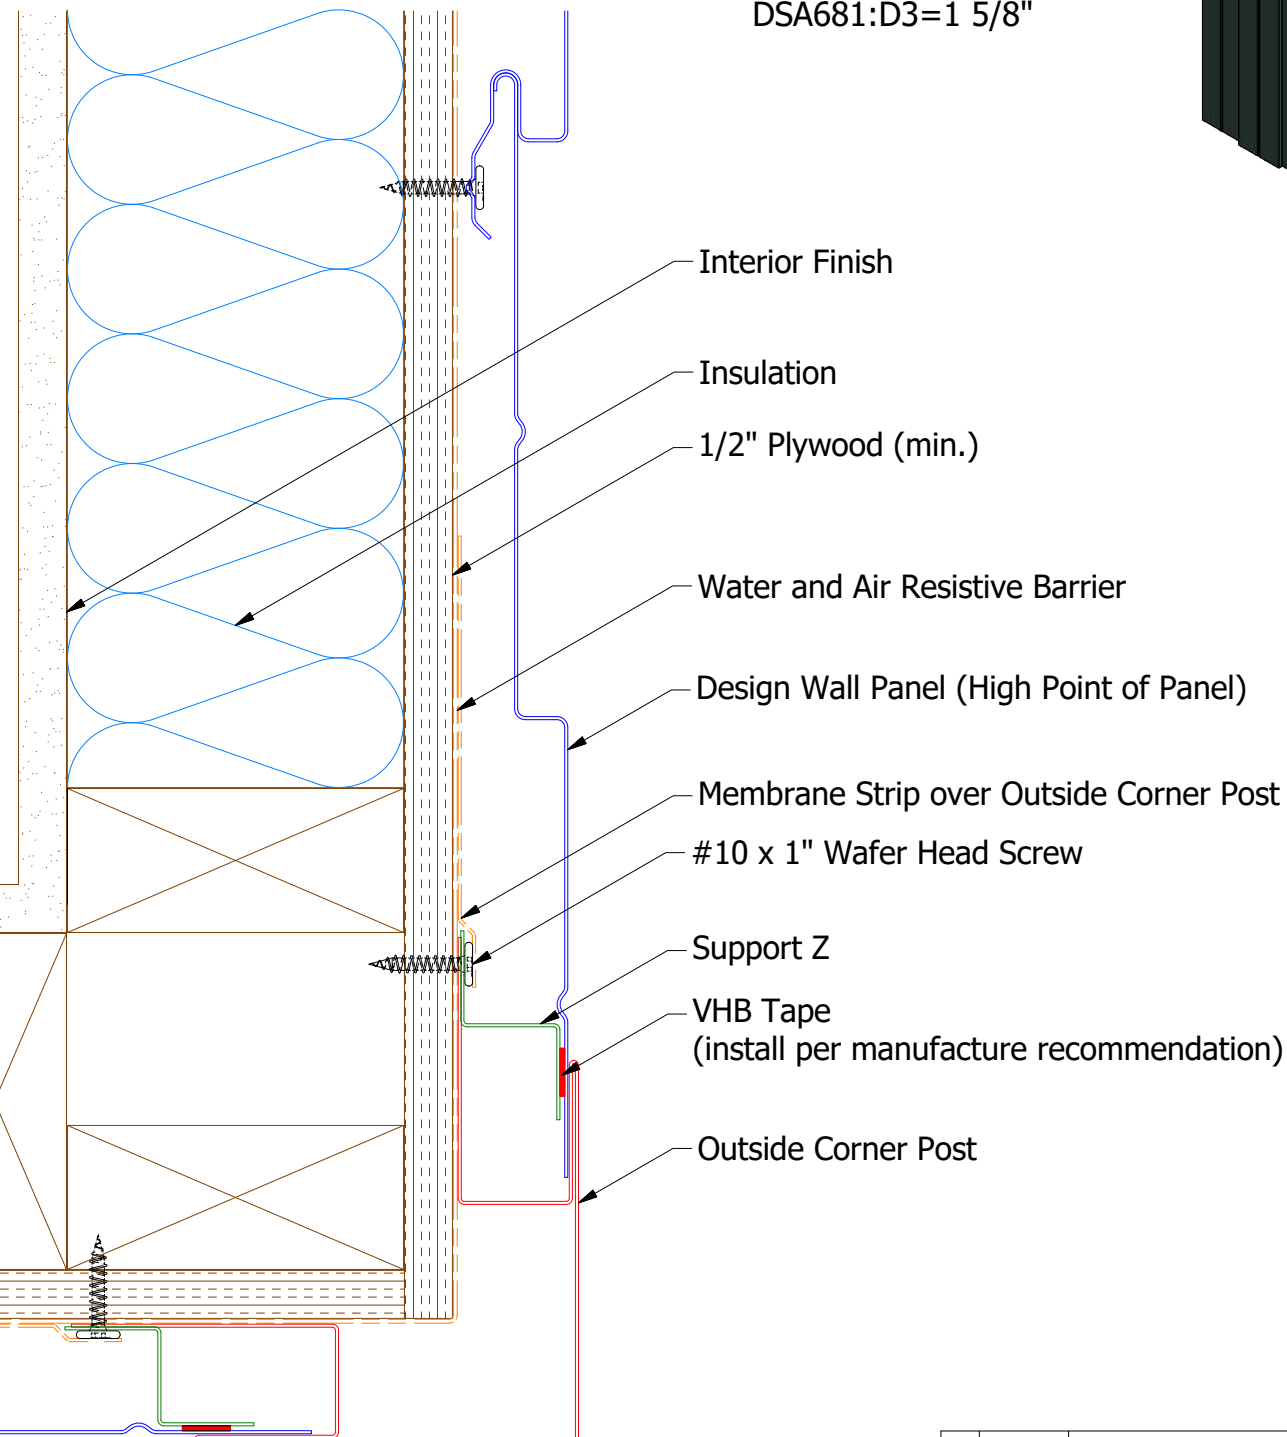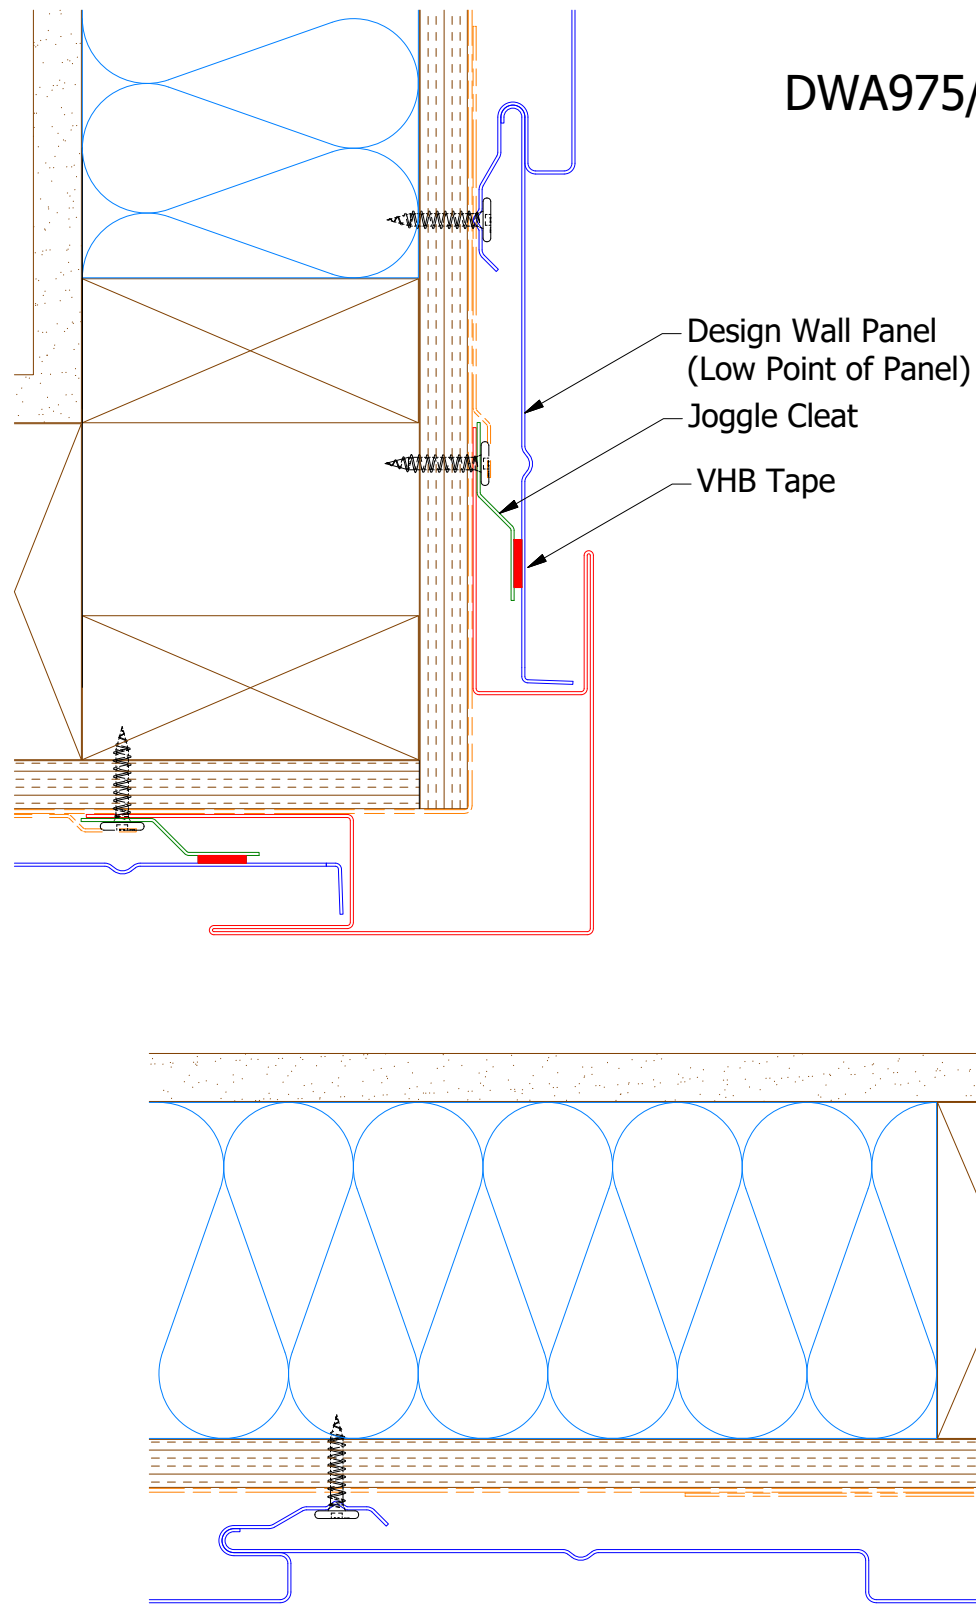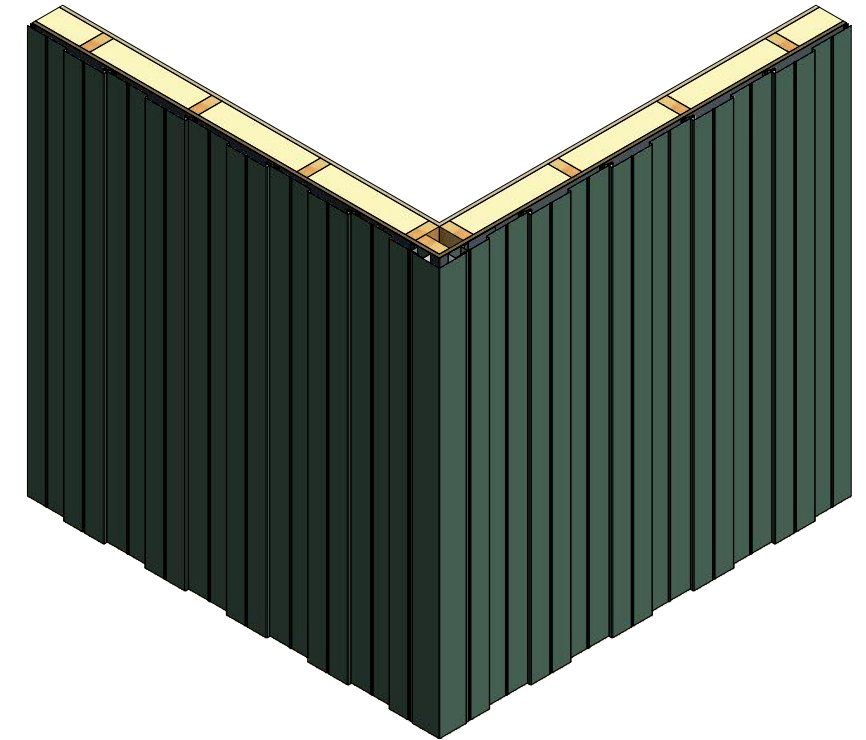

Outside Corner Post
DWA602: D1= 2 3/4; D2= 1 1/8
DSA602: D1= 3; D2= 1 7/8

Note: * denotes color side.
Note: stainless steel pop rivets maybe needed along with VHB tape for longer panels.

 ATAS INTERNATIONAL, INC Allentown PA 610-395-8445 Mesa AZ 480-558-7210		TITLE Design Wall Outside Corner Detail	
		DWG. NO.	DR DMR DATE APP DAS DATE SH. SIZE B SCALE X:X
REV. NO.	DATE	DESCRIPTION OF REVISION	BY APP

01	7/19/2021	Changed Pop Rivets to VHB Tape	DMR