



Step 1

Attach Subgirt with Fastener.

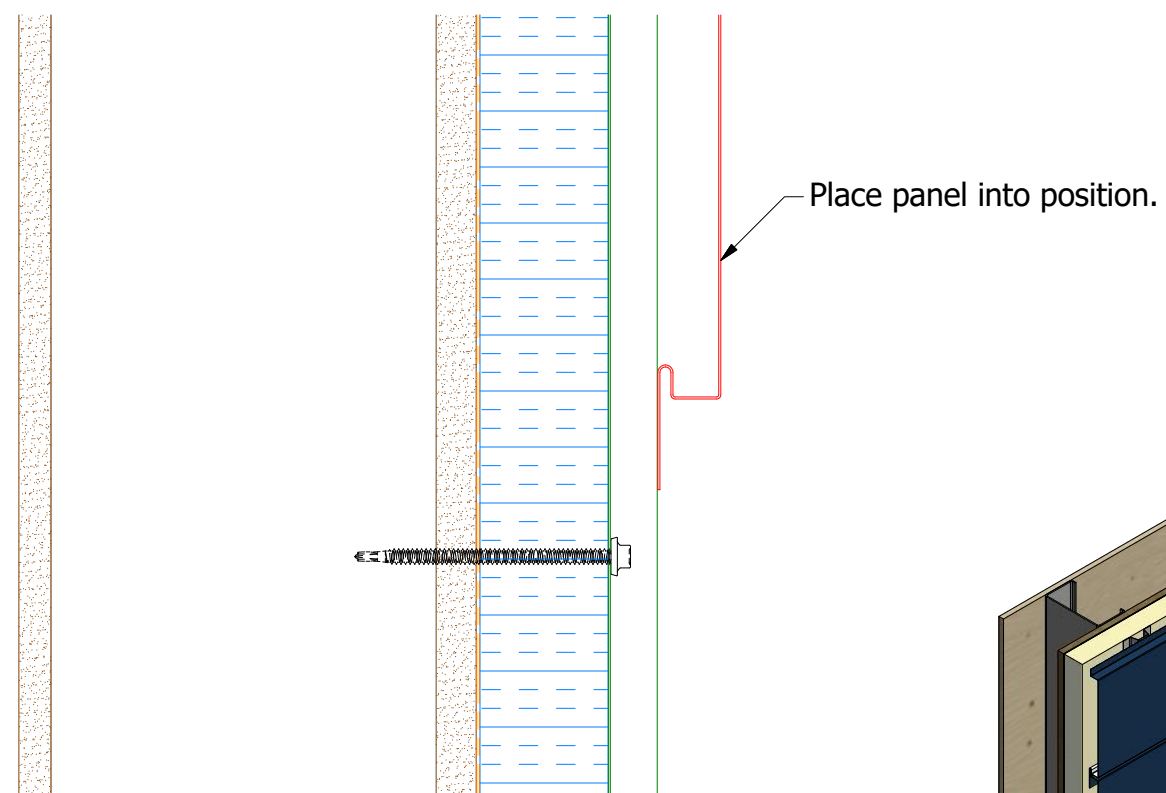


Step 2

Place panel into position.

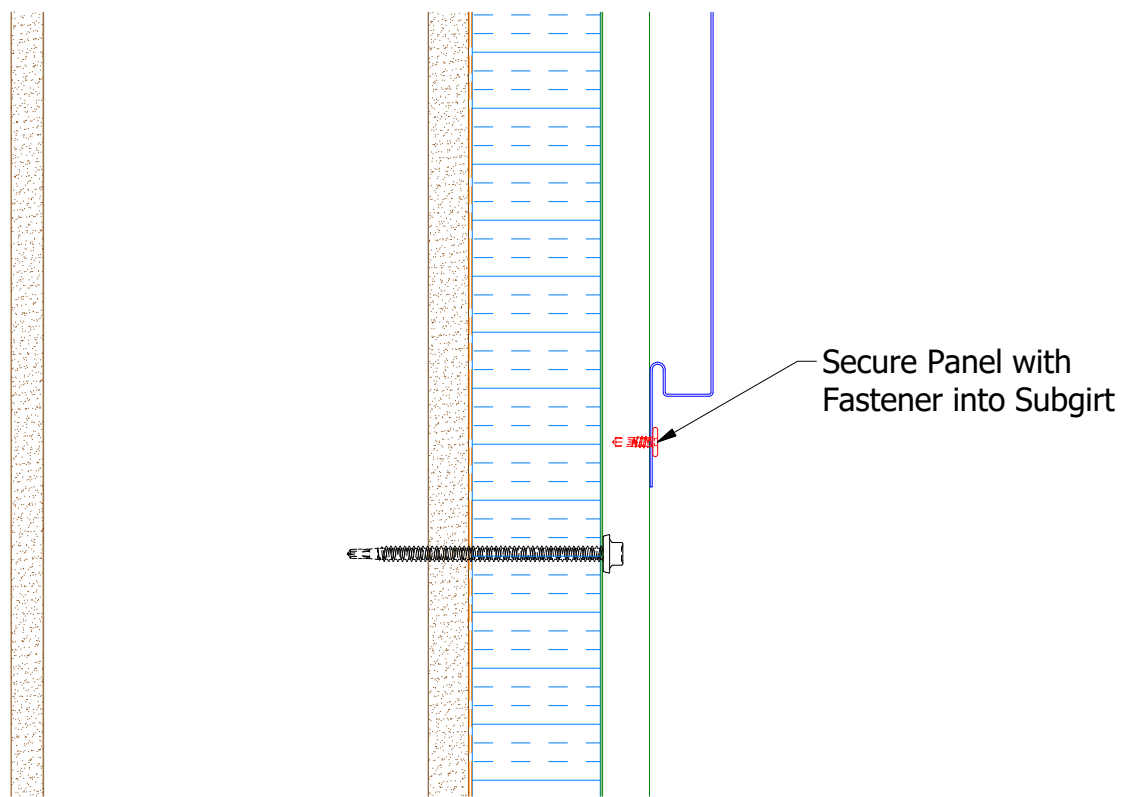


Step 3

Secure Panel with Fastener into Subgirt

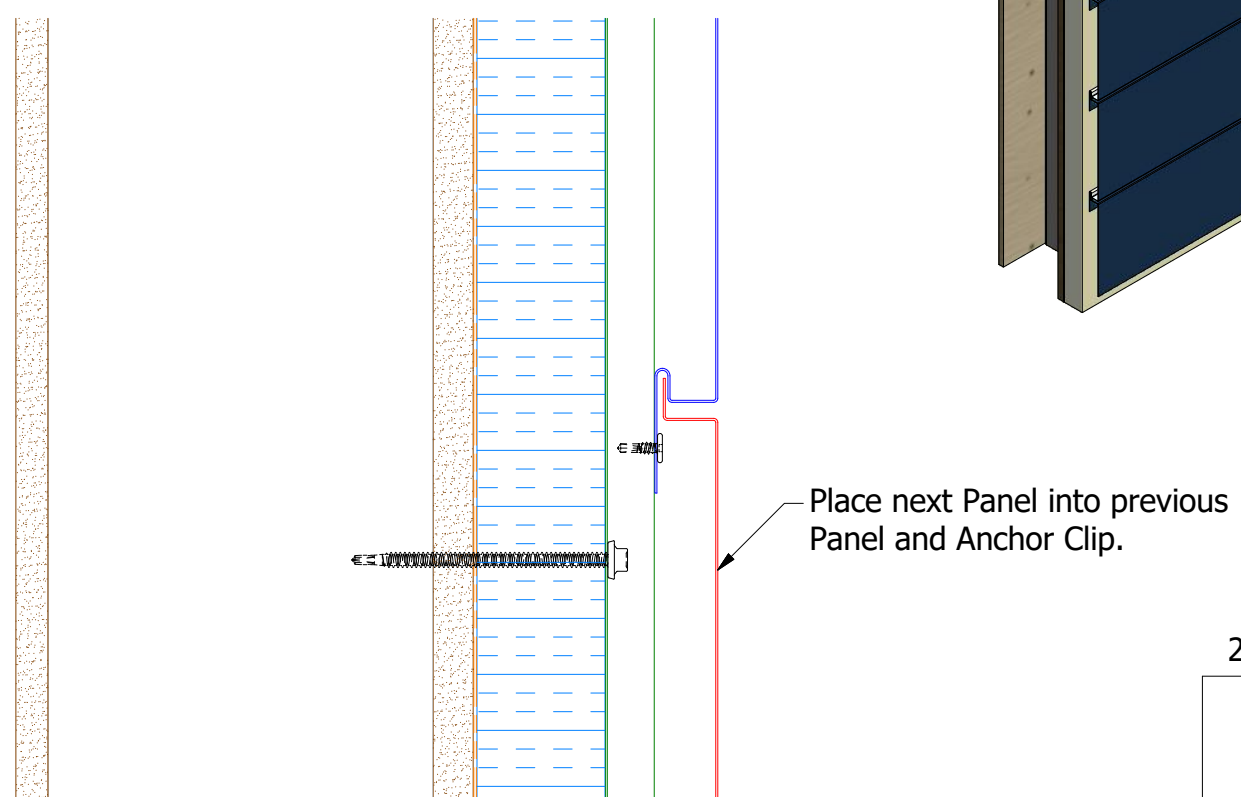


Step 4

Place next Panel into previous Panel and Anchor Clip.

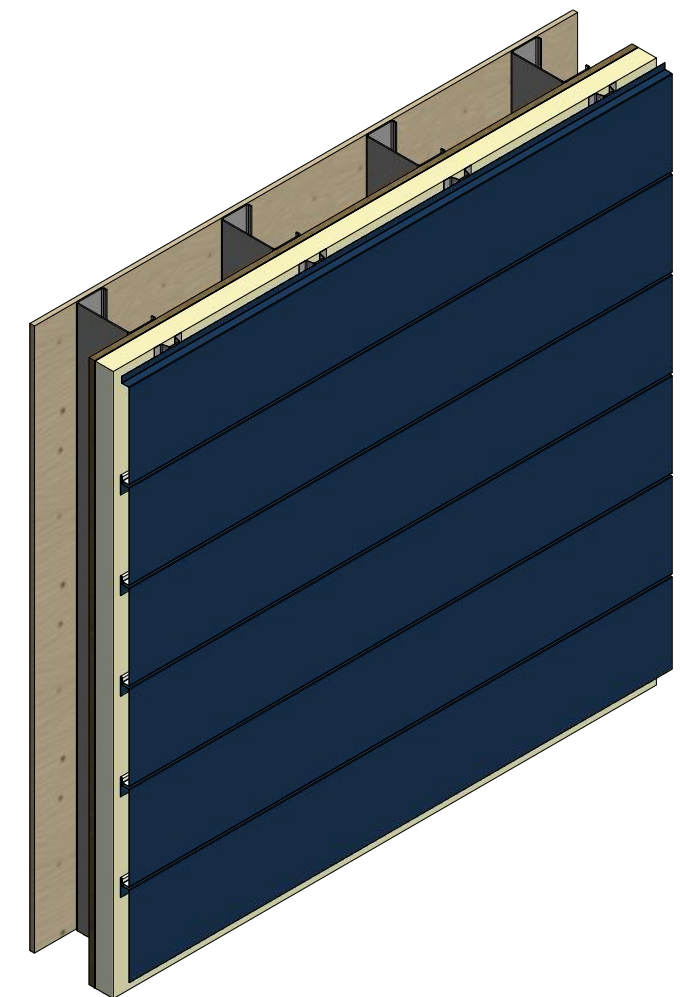

**Note:** If clip system is utilized, you must fix each panel at one point for each panel run.

2 Stage Method of Weather Proofing

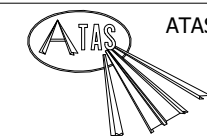

ATAS INTERNATIONAL, INC  
Allentown PA  
610-395-8445  
Mesa AZ  
480-558-7210

TITLE		Versa-Seam Fastening Detail	
DWG. NO.	DR	DATE	7/30/2014
	KRK	DATE	
MATERIAL	APP	SH. SIZE	B
REV. NO.	DATE	DESCRIPTION OF REVISION	SCALE X:X