


Horizontal Panel

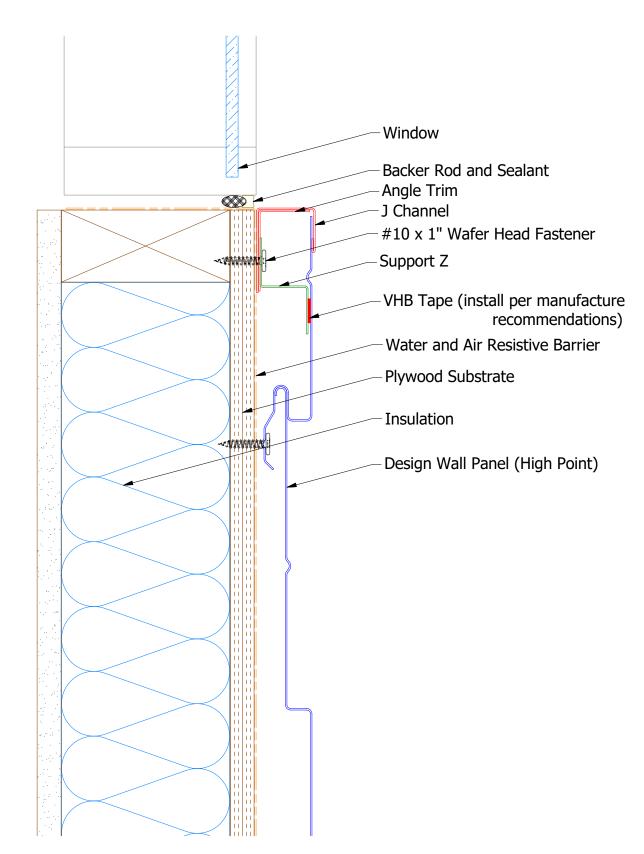


Note: * denotes color side.

Note: stainless steel pop rivets maybe needed along with VHB tape for longer panels.

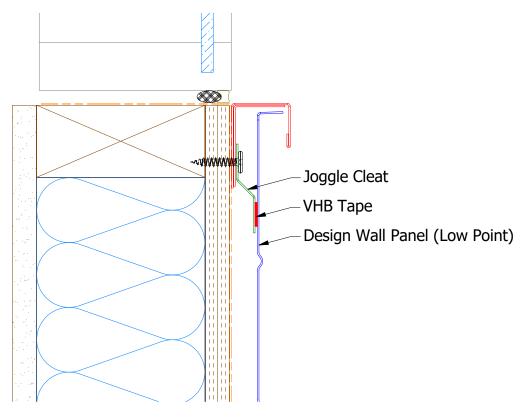

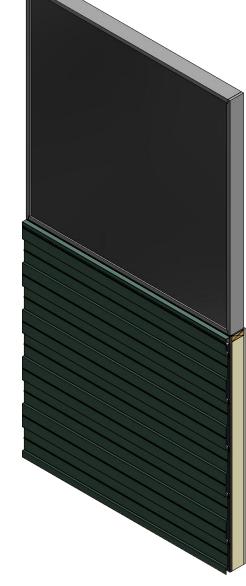


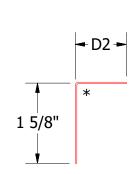

Angle Trim DWA680: D2=1" DSA680: D2=1 3/4"

→ D1 → 1 3/4" 1/4" C.H.

J Channel DWA118: D1=1 1/8" DSA178: D1=1 7/8"

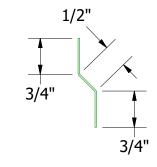

DWA975/ DSA975 - Joggle Cleat



ATAS INTERNATIONAL, INC Allentown PA 610-395-8445 Mesa AZ

TITE Design Wall Existing Window Sill Detail

				Design wan Existing wi	Huow 3	iii Detaii
				DWG. NO.	DR DMR	^{DATE} 7/20/2018
7/19/2021	Changed Pop Rivets to VHB Tape	DMR		MATERIAL	APP	DATE
DATE	DESCRIPTION OF REVISION	BY	APP		SH. SIZE B	SCALE X:X