

Step 1.1 Install Base Trim on one side.
Step 1.2 Field Notch Base Trim and run up against Wall.

Step 2.1 Install other Base Trim.
Step 2.2 Field Notch Base Trim to overlap on top of previous Base Trim.


Step 3.1 Install Inside Corner Post down to Base Trim.
 (use other appropriate trim when conditions and wall panels warrant)

Step 4.1 Install Membrane Strip over Base Trim on both sides.

Step 4.2 Install Membrane Strip over Inside Corner Post and previous Membrane Strip on both sides to create a positive flow.

Step 5.1 Install Wall Panels.

Note: Follow the same process for the Base to Outside Corner Solid Substrate Detail.

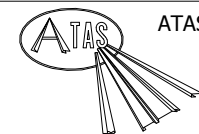

ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

TITLE				Base to Inside Corner Solid Substrate Detail	
DWG. NO.		DR		DATE	
		KRK		4/6/2015	
MATERIAL		APP		DATE	
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	
SH. SIZE				SCALE	
B				X:X	