
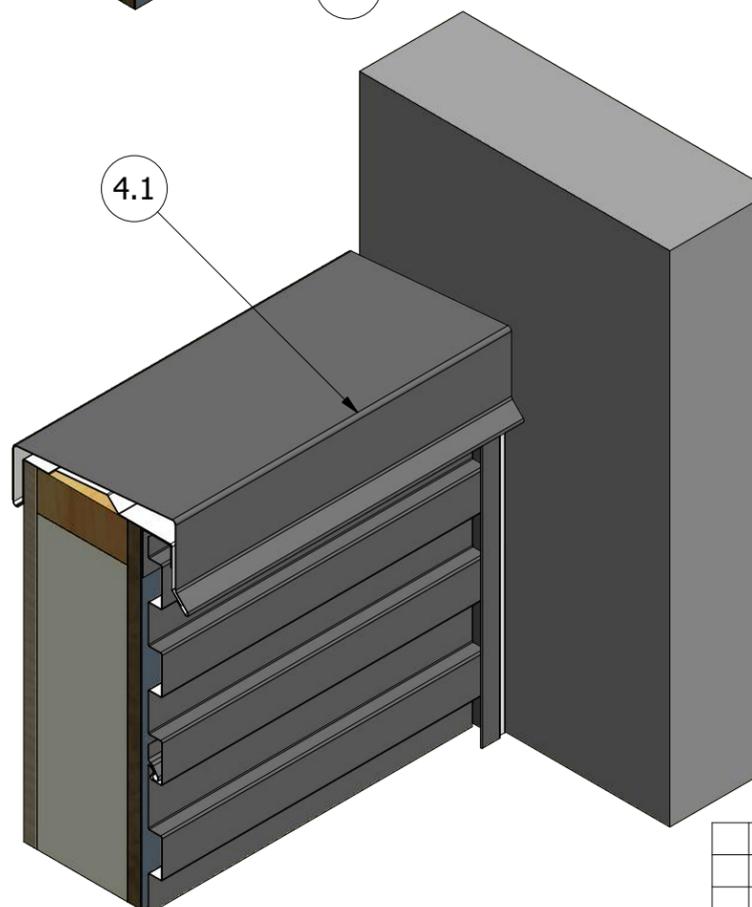


DETAIL A

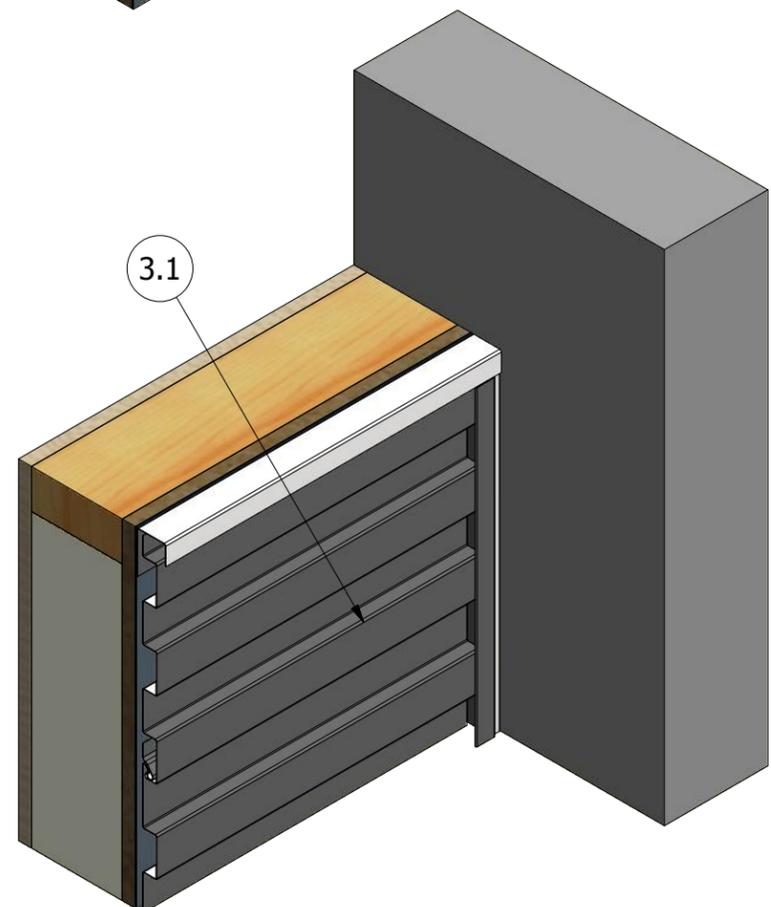


Step 1.1 Install J Channel for Top of Wall Condition.
Step 1.2 Run J Channel up against Endwall Structure.

Step 2.1 Install Endwall J Channel with Angle Trim for Color up into Top of Wall J Channel.
Step 2.2 Field notch Endwall J Channel as shown in Detail A.
Step 2.3 Install Membrane Strip over Endwall J Channel and Angle Trim.
Step 2.4 Install Backer Rod and Sealant between Endwall J Channel and Endwall Structure.

Step 3.1 Install Panels into both J Channels using appropriate trim as required.

Step 4.1 Install Coping System (by others) as required.

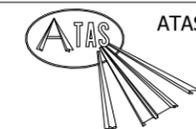

ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

TITLE Endwall to Top of Wall Solid Substrate Detail		
DWG. NO.	DR KRK	DATE 4/7/2015
MATERIAL	APP	DATE
SH. SIZE B	SCALE X:X	