
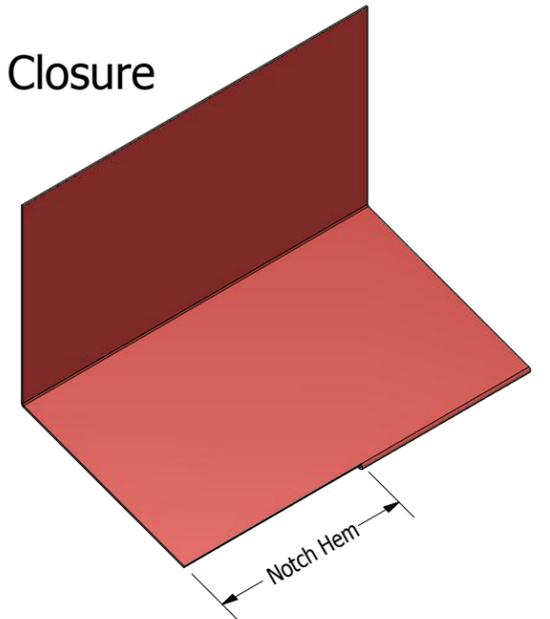




Step 1.2 - Headwall Z Closure

Trim and Fold 1" Tab

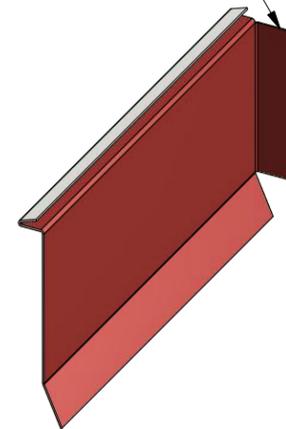

Step 3.1 - Headwall Trim

Step 4.1 - Sidewall Counterflashing

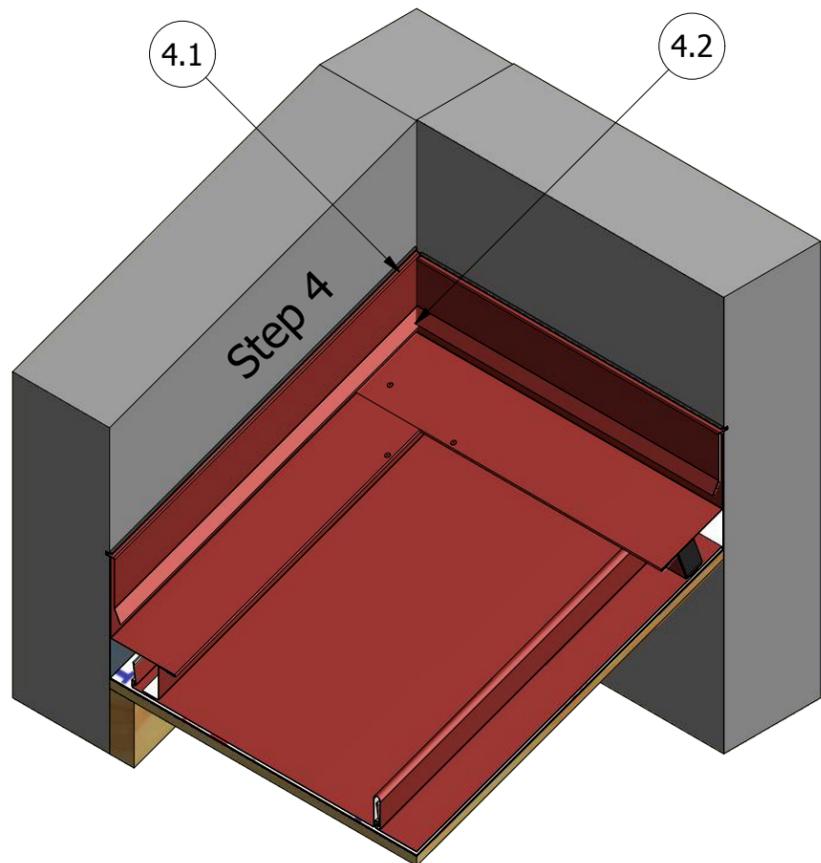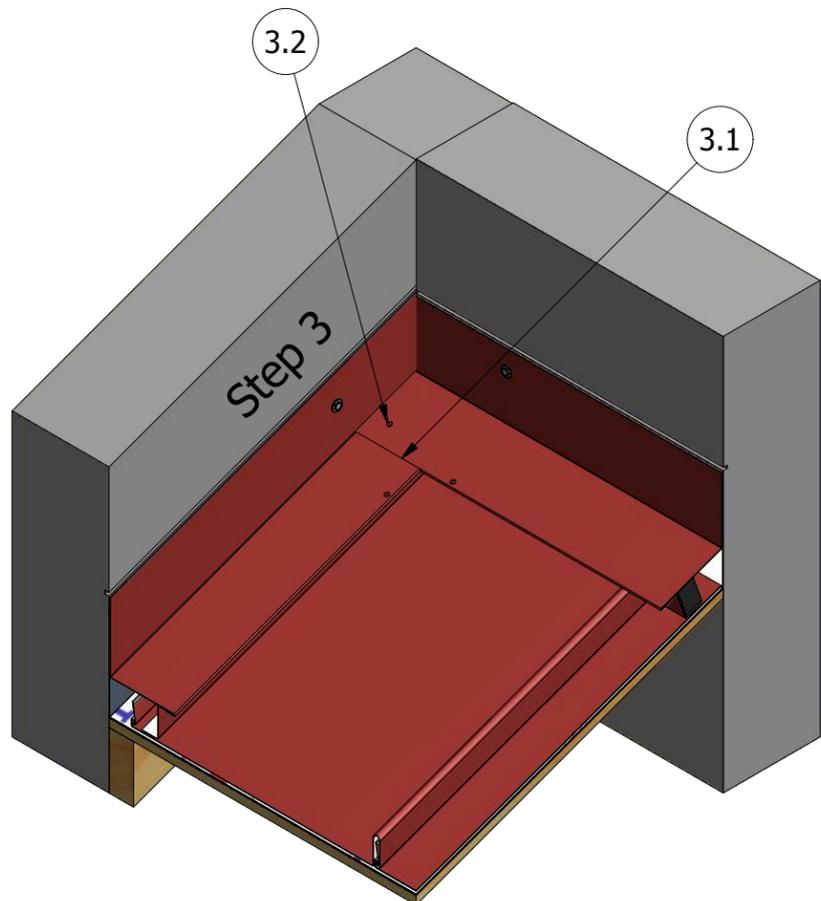

**Step 1.1** Install Sidewall Z Closure up to Headwall with appropriate accessories. (trim where necessary)

**Step 1.2** Notch Top leg of Headwall Z Closure back so it will run up against Sidewall Z Closure.

**Step 2.1** Install Sidewall Trim up to Headwall with appropriate accessories. (trim where necessary)

**Step 3.1** Install Headwall Trim with appropriate accessories. Notch Headwall Hem back so Headwall Trim sits flush against Sidewall Trim.

**Step 3.2** Seal with appropriate sealant and Pop Rivet Headwall Trim to Sidewall Trim.

**Step 4.1** Install Sidewall Counterflashing. Trim and fold Sidewall Counterflashing as shown.

**Step 4.2** Install Headwall Counterflashing. Trim both bottom drip edges to meet at intersection of Counterflashings.



ATAS INTERNATIONAL, INC  
Allentown PA  
610-395-8445  
Mesa AZ  
480-558-7210

TITLE  
Standing Seam Headwall to Sidewall Detail

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	DWG. NO.	DR	DATE
						KRK	2/16/2015
					MATERIAL	APP	DATE
					SH. SIZE	B	SCALE
							X:X