


Step 1


1.1

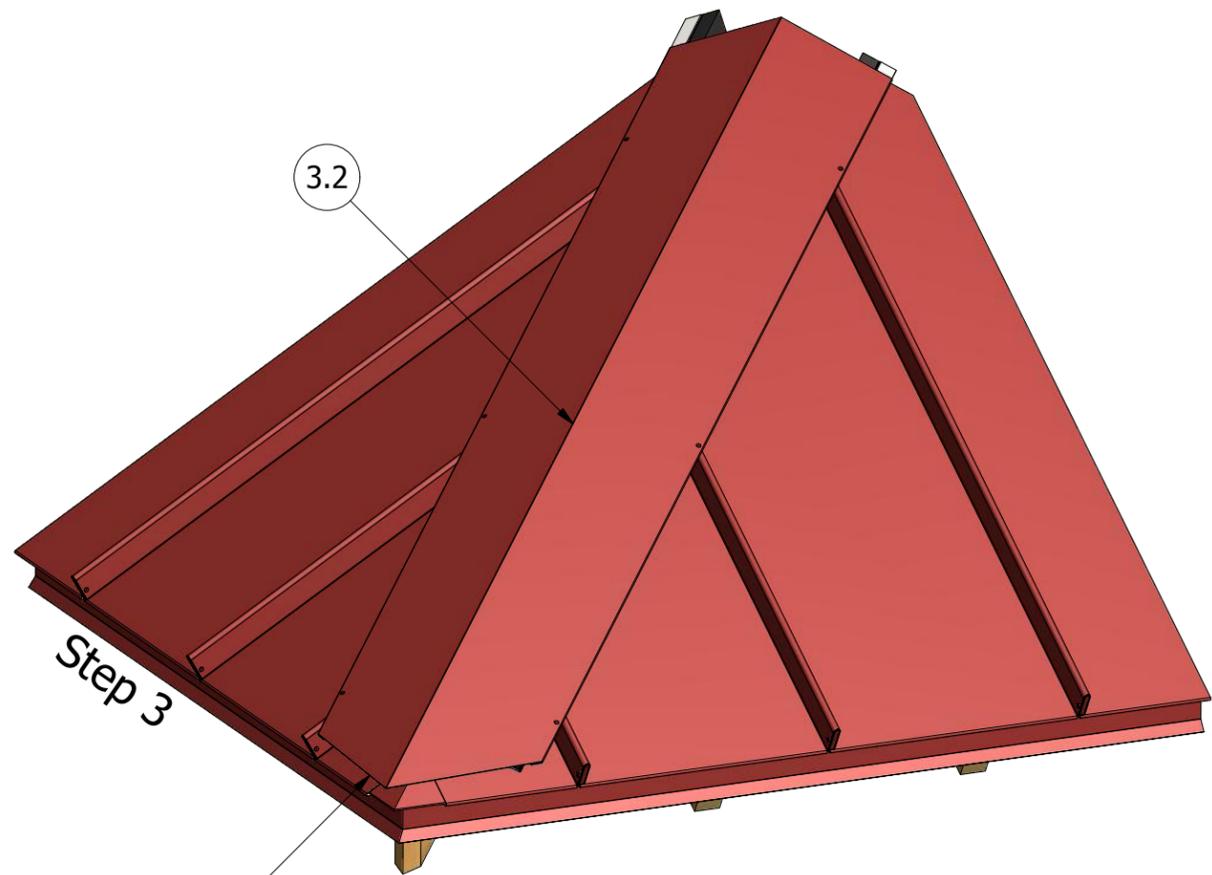

Step 3


3.2

3.1

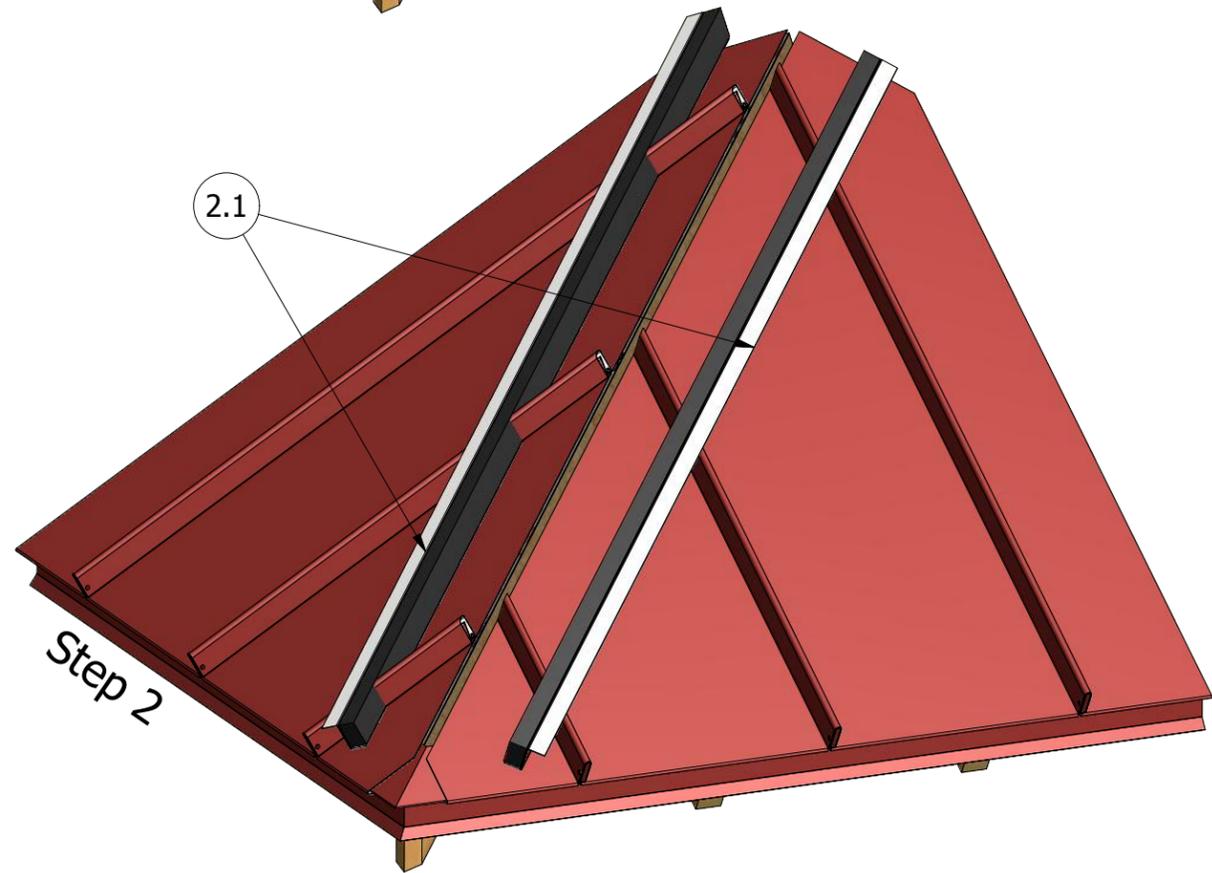

Step 2

2.1

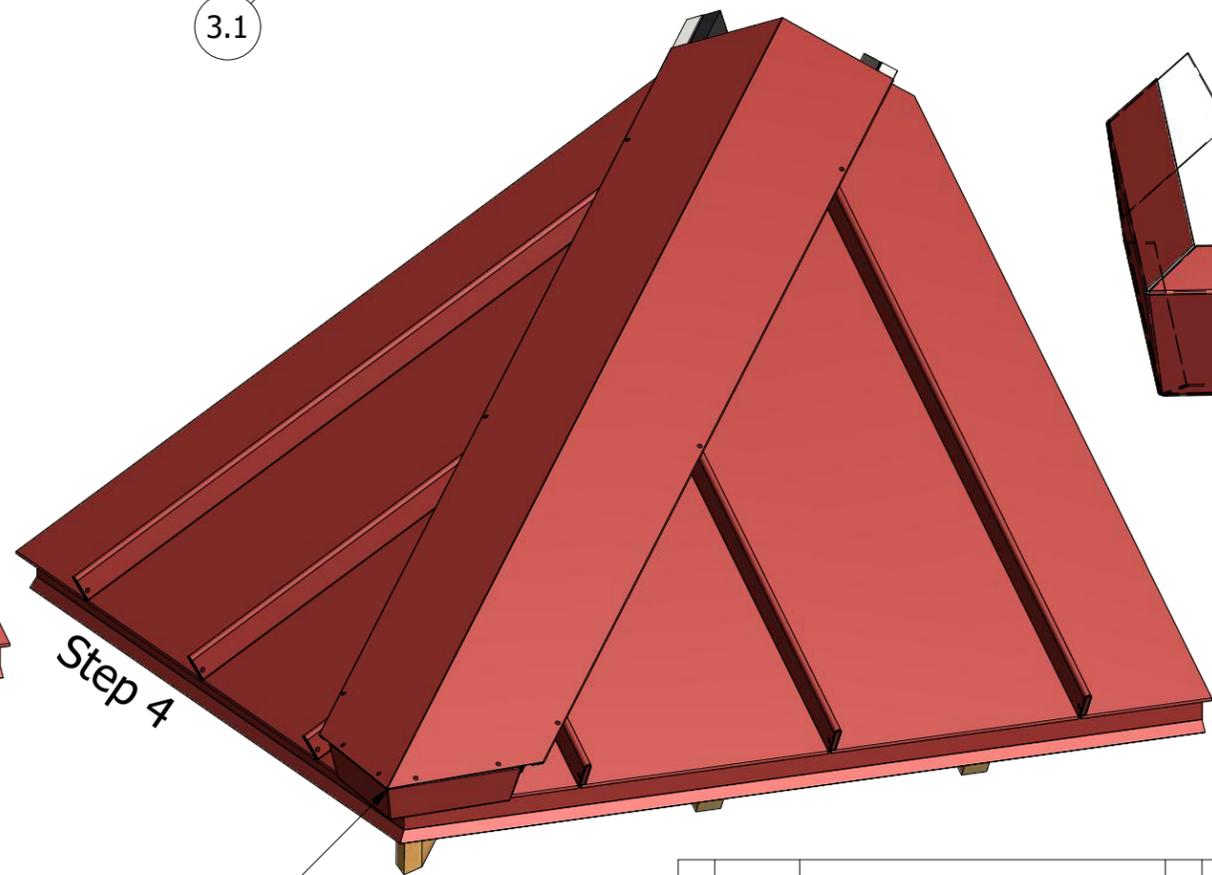

Step 4

4.1


Step 1.1 Install Standing Seam Panels on Roof Deck. (see eave detail for installation at eave trim)

Step 2.1 Install Z Closures at Hip Condition on top of Standing Seam Panels with appropriate accessories.

Step 3.1 Field Notch and Hip Cap as shown.

Step 3.2 Install Hip Cap on Z Closures using Painted Pop Rivets.

Step 4.1 Install Hip End Plug with Painted Pop Rivets on the Hip Cap at the Eave Trim. (leave gap to let water drain)

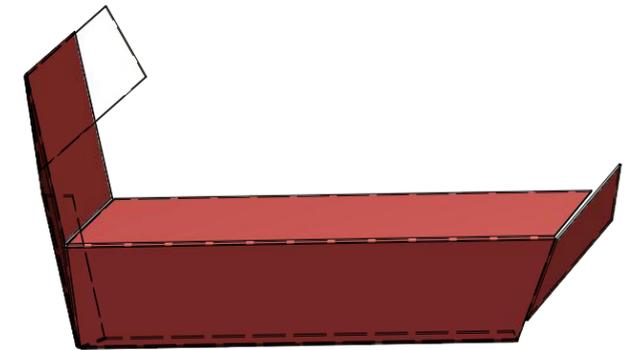

Hip End Cap



ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

TITLE
 Standing Seam Hip at Eave Detail - End Plug

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	DWG. NO.	DR	KRK	DATE	4/14/2017
						APP		DATE	
					MATERIAL	SH. SIZE	B	SCALE	X:X