
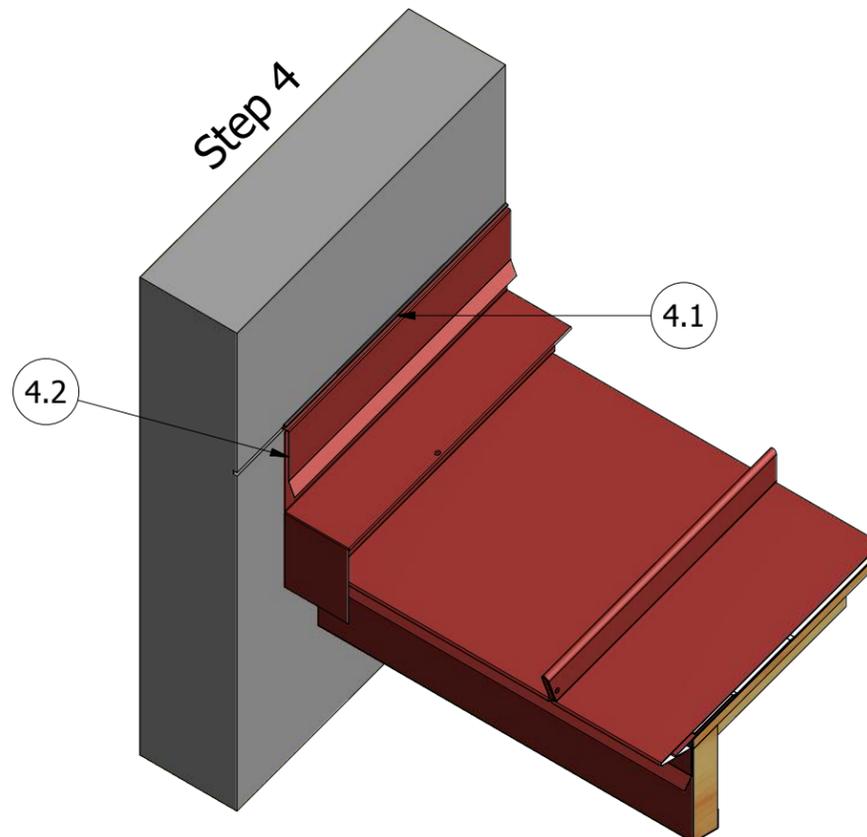


Step 1.1 Install Roof Panels on Eave Trim.
Step 1.2 Field Notch and Hem Panel over Eave Trim.

Step 2.1 Install Sidewall Z Closure at Eave with appropriate accessories.
Step 2.2 Field Notch where necessary.

Step 3.1 Install Sidewall Trim with appropriate accessories.
Step 3.2 Field Notch and Fold Sidewall Trim as shown.
Step 3.3 Leave 1/4" Gap between Sidewall Trim End Tab and Panel Hem around Eave Trim.

Step 4.1 Install Counterflashing with appropriate accessories.
Step 4.2 Field Notch where necessary.

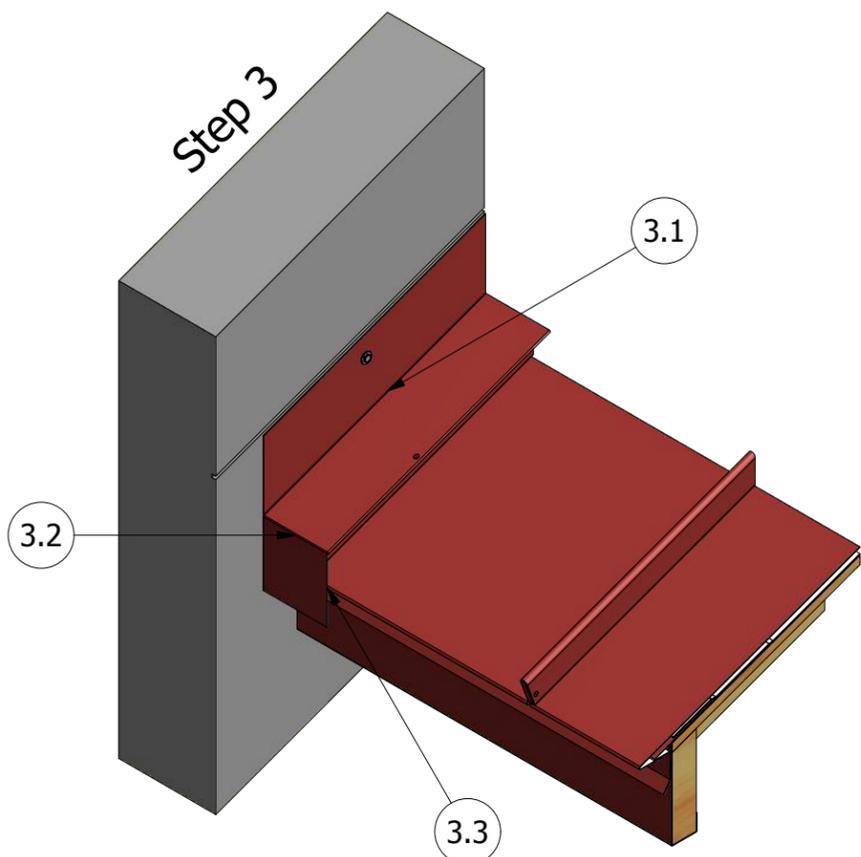

ATAS ATAS INTERNATIONAL, INC
 Allentown PA
 610-395-8445
 Mesa AZ
 480-558-7210

TITLE
Standing Seam Sidewall to Eave Detail

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	DWG. NO.	DR	KRK	DATE	2/19/2015
						APP		DATE	
					MATERIAL	SH. SIZE	B	SCALE	X:X