




Install Receiver Strip

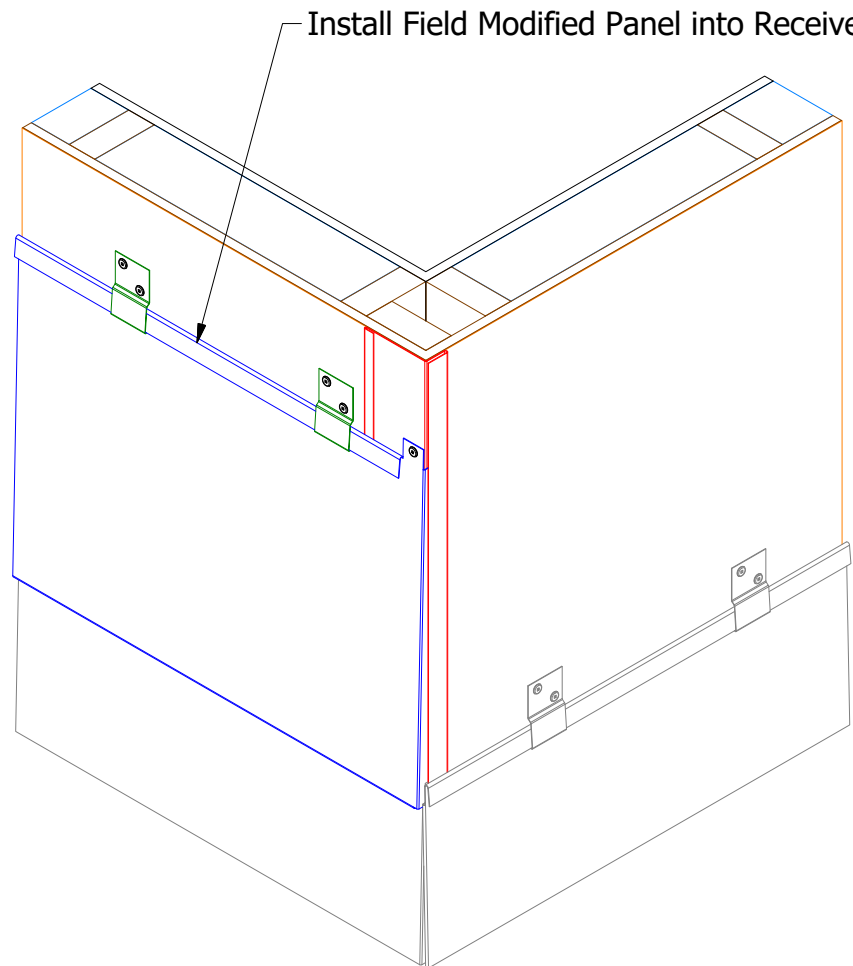

Install Field Modified Panel into Receiver Trim

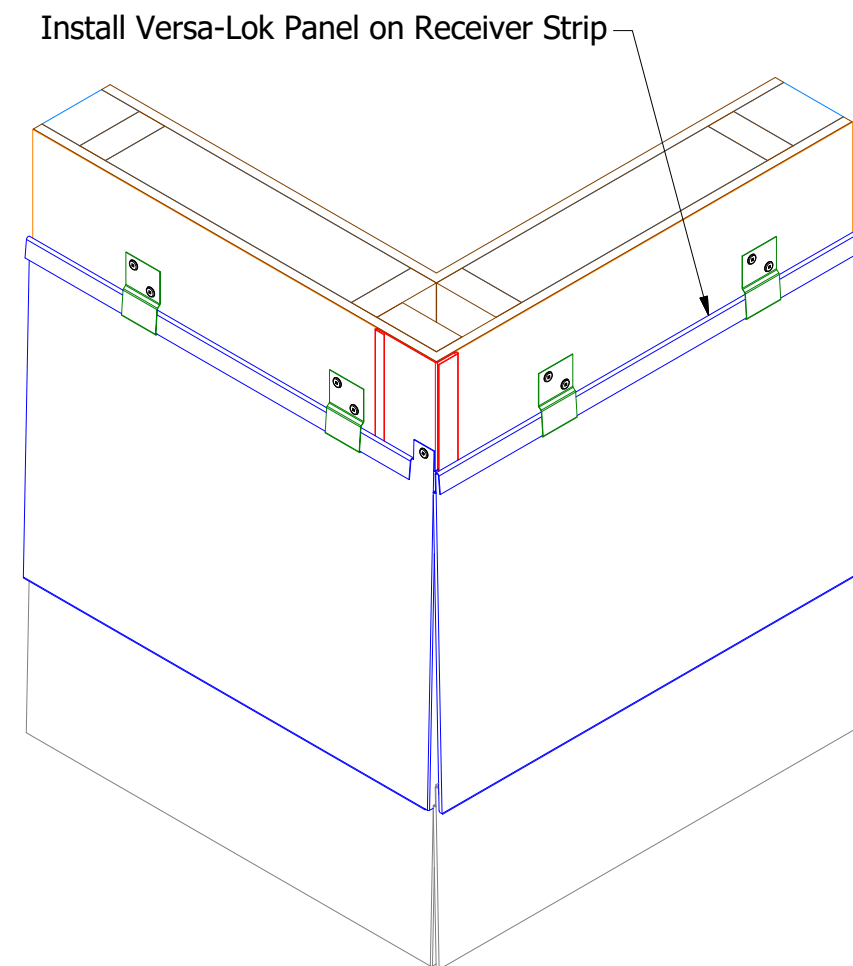


Install Versa-Lok Panel on Receiver Strip

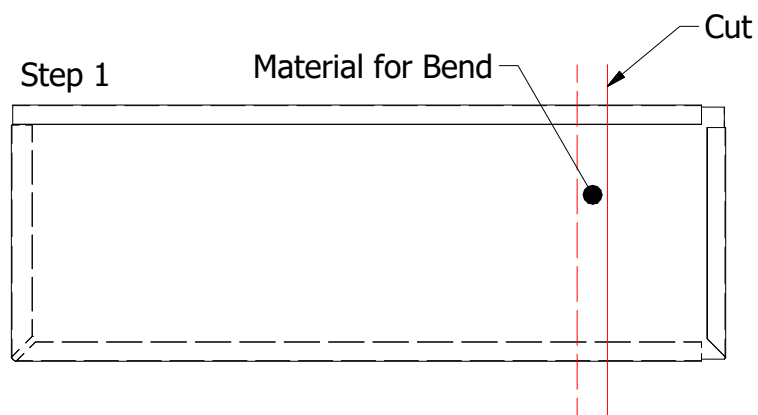


Step 1

Material for Bend


Cut

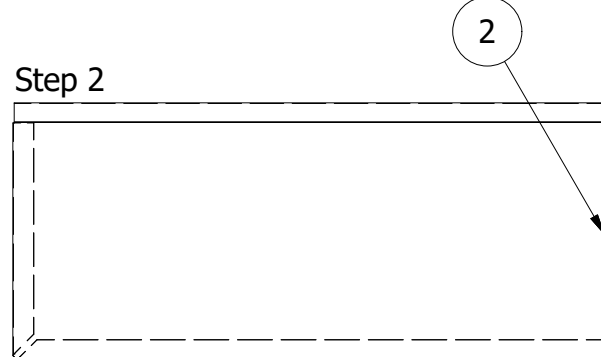


Step 2

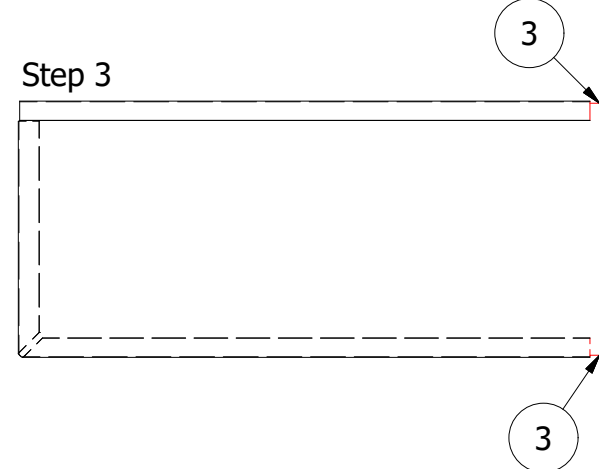

Step 3

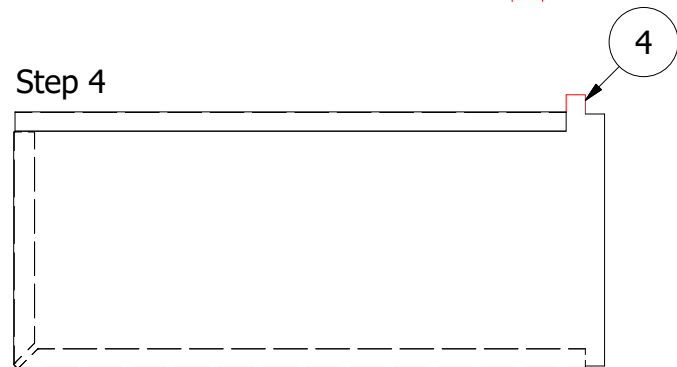

Step 4

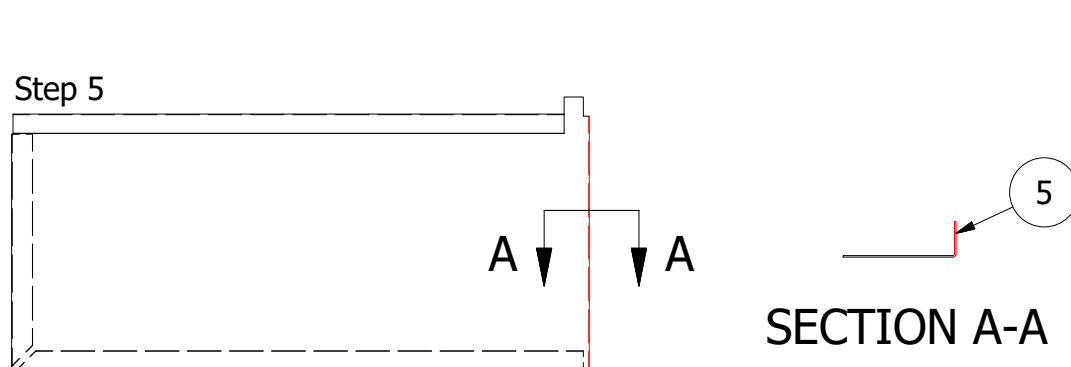

Step 5

A A

SECTION A-A


Step 1: Mark on a full Versa-Lok Panel where to Field Cut, leaving extra Material for the Bend in Step 5.

Step 2: Field Cut Versa-Lok Panel.

Step 3: Notch Back Top and Bottom Hems.

Step 4: Cut and Fold up Top Hem as Shown.

Step 5: Field Bend End of Panel.

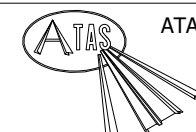

ATAS INTERNATIONAL, INC  
Allentown PA  
610-395-8445  
Mesa AZ  
480-558-7210

TITLE  
Versa-Lok Outside Corner ALT Installation Detail

DWG. NO. DR KRK DATE 12/15/2022

APP DATE

MATERIAL SH. SIZE B SCALE X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP