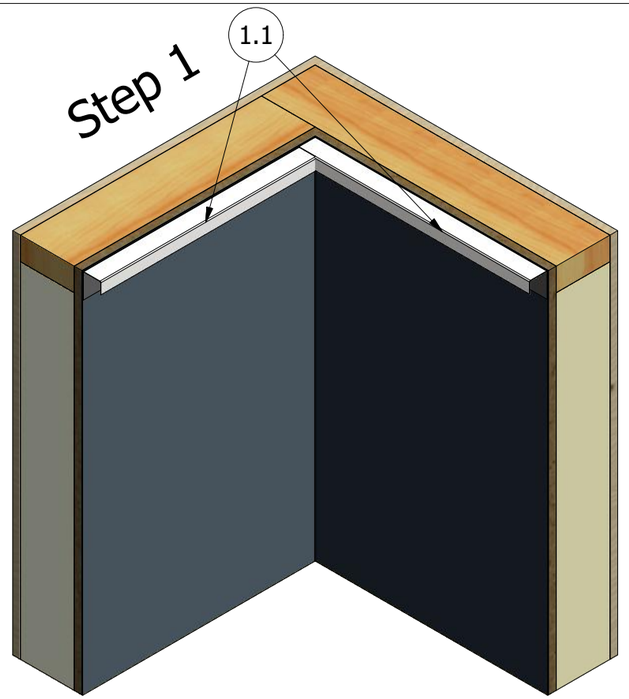

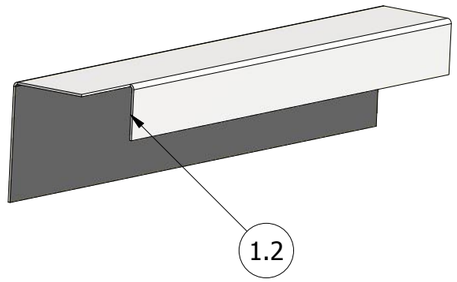

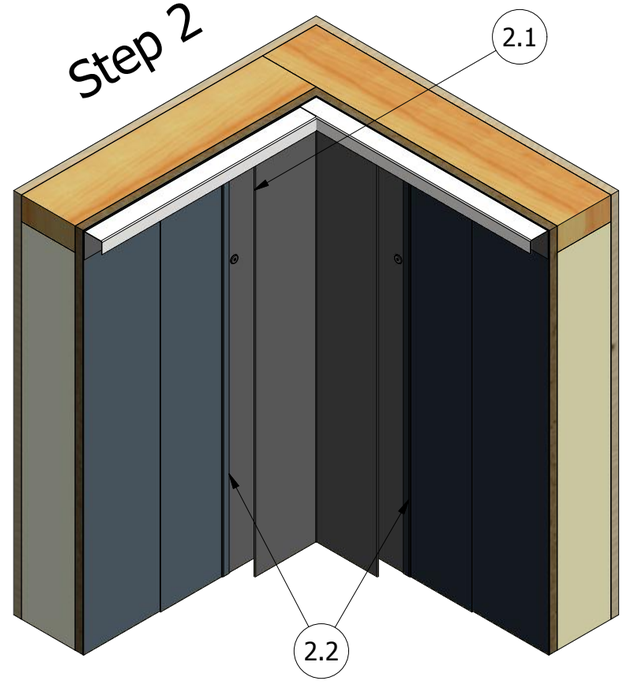

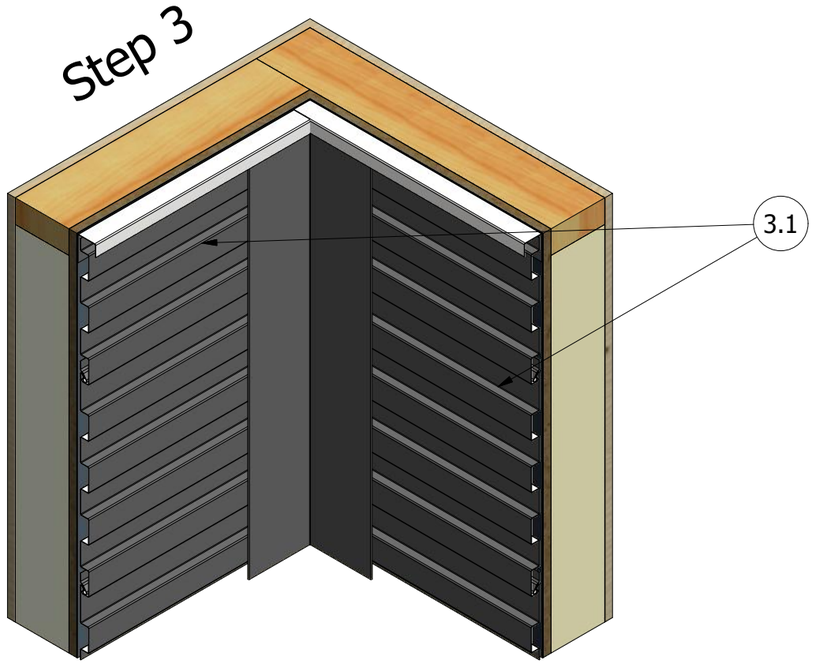

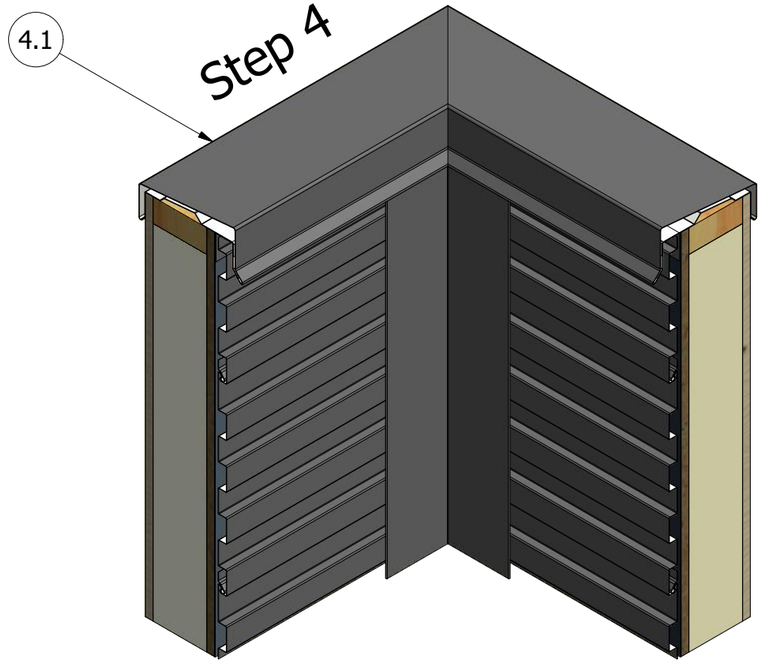

Step 1.1 Install J Channel.
Step 1.2 Field Trim J Channel so that they are able to be overlapped.

Step 2.1 Install Inside Corner Post up into J Channel.
Step 2.2 Install Membrane Strip over Inside Corner Post.

Step 3.1 Install Wall Panels. (use appropriate trim when conditions warrant)

Step 4.1 Install Coping System (by others)

Note: Follow the same process for the Base to Outside Corner Solid Substrate Detail.

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

TITLE: Inside Corner to Top of Wall Solid Substrate Detail

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

DWG. NO.
MATERIAL
DR KRK DATE 4/7/2015
APP DATE
SH. SIZE B SCALE X:X